


Configuring the Coastal Wildlife Club Garmin eTrex H GPS Receiver


eTrex H Configuration Step 1

1. If not new, perform Reset (not in manual)
 - a. With unit OFF, Hold Down POWER, PAGE, & ENTER, to see this display
 - b. Scroll DOWN to select "Yes" and hit ENTER, then wait for SkyView Page

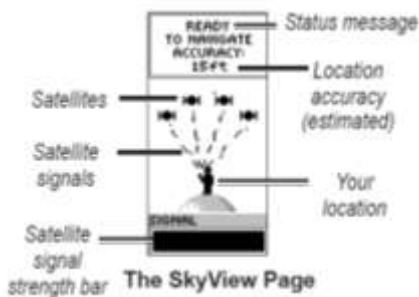

eTrex H Configuration Step 3

3. Change Lat/Long to 5 Decimal
 - a. Hit PAGE until Main Menu, Scroll DOWN to "Setup" and hit ENTER
 - b. On Setup Screen Scroll DOWN to "UNITS" and hit ENTER
 - c. Hit ENTER to see options for Units. The option we need is NOT

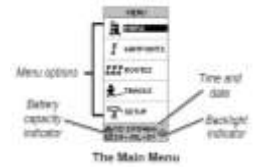


ON THE SCREEN! Scroll UP to find it. Once "dddd.ddddd*" is highlighted hit ENTER.

- d. Hit PAGE to return to the Setup Screen

eTrex H Configuration Step 2

2. Configure Advanced SkyView
 - a. Quickly Click & Release ENTER to see this display
 - b. Scroll DOWN to select "Advanced SkyView" and hit ENTER to see this display

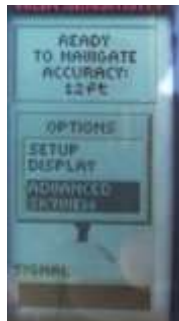

eTrex H Configuration Step 4

4. Change Mode to WAAS (skip steps a,b,c for older Dep't of Commerce Units)
 - a. On Setup Screen scroll DOWN to "System" and hit ENTER. You will see the default Mode which is "Normal"
 - b. Hit ENTER to see list of Mode options and scroll DOWN to "WAAS" and hit ENTER. You will see the "Mode" is now WAAS
 - c. Hit PAGE until you get back to Advanced SkyView

